

designwerk

# Berry

designwerk

FIRST CLASS LIVING

**Model:** Berry REC armrest left + element 120 deep + stool PS 120 + element 140 deep armrest right  
**Cover:** leather Eagle M2102 Grey and fabric Roma E160 Cloud Dancer

BERRY


# Details



Elements with  
aesthetic  
pipe quilting



Pocket spring core  
for maximum sea-  
ting comfort

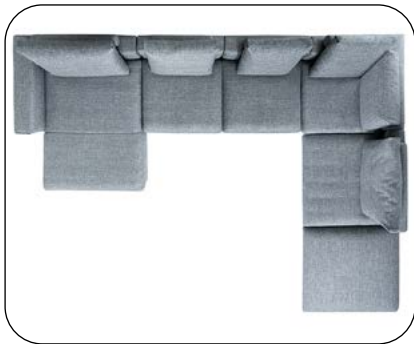

Modular sofa with  
extensive range of  
models




– Finger on the pulse: Charming and attractive. Berry is said to be the Don Juan of the designwerk sofas. Berry is truly irresistible and seductive. Berry directly invites you to relax, take a break and chill out.

Pocket spring core? – Oh yes. This is the unbeatable king of seat quality. Feathers are sewn elegantly in small fabric pockets. Greater strength, compressed density and stable robustness are the result. Thanks to its pocket spring core, Berry is always in beautiful shape. –

BERRY

# Technical data

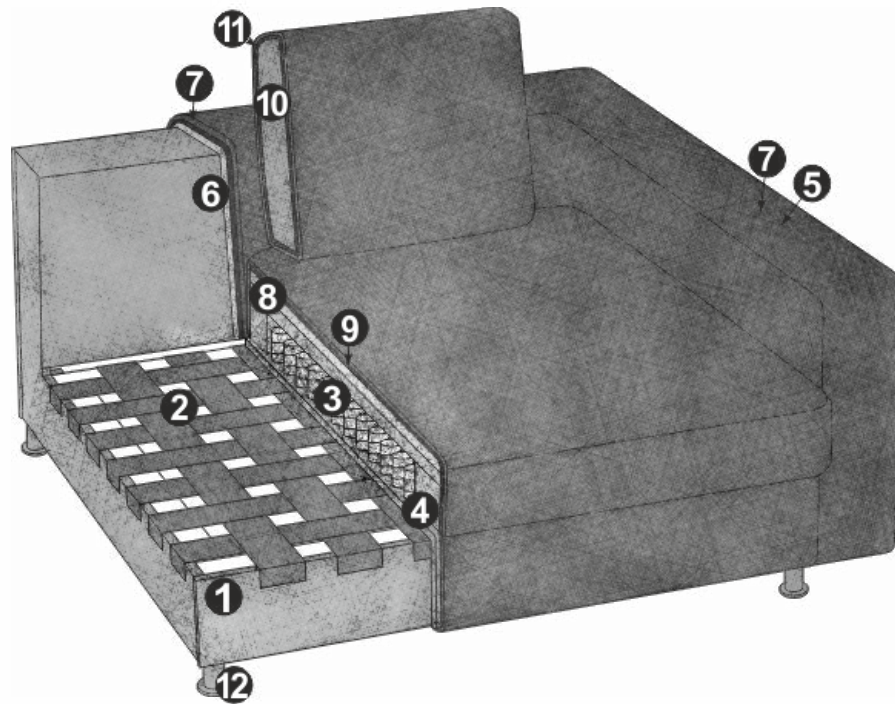

- 01** Frame: Beech wooden construction
- 02** Seat suspension: flexible upholstery strap
- 03** Seat suspension: bonnell spring core
- 04** Upholstery structure seat: highly elastic cold foam (density 35 kg/m3)
- 05** Upholstery structure armrest: premium comfort foam (density 30 kg/m3)
- 06** Upholstery structure back: standard comfort foam (density 25 kg/m3)
- 07** Upholstery structure back and armrest: upholstery wadding 200g
- 08** Upholstery structure seat: chamber cushion with a filling of viscose foam flakes (70%) and silicone fibres (30%)
- 09** Upholstery structure seat: upholstery wadding 300g
- 10** Upholstery structure cushion: chamber cushion with a filling of viscose foam flakes
- 11** Upholstery structure cushion: upholstery wadding 130g
- 12** Base: metal design base | satin nickel | height: 6 cm

## Good to know:

- overall depth available in 105 and 120 cm
- available in fabric and leather (single colour)
- includes easyjack connector system for maximum flexibility
- FSC® certified (FSC®-C112933)
- accessories: back cushions with rollers | optional: lumbar cushions, throw cushions, back cushions with headrest adjustment


BERRY

# Type plan




\*Please note that the elements with pipe quilting have a wave spring base instead of a pocket spring core.


Decorative cushions are available in a wealth of designs and upholstery options.  
Find out more at [www.designwerk.li](http://www.designwerk.li)

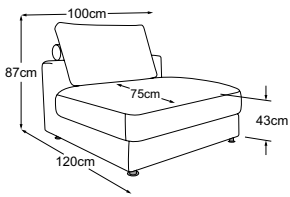


**Element 100 deep**  
Item number: D071105

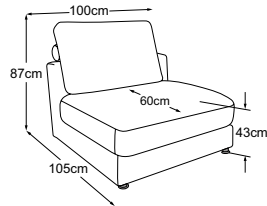


**Element 100**  
Item number: D071104

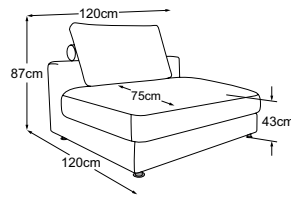


**Element 120 deep**  
Item number: D071100

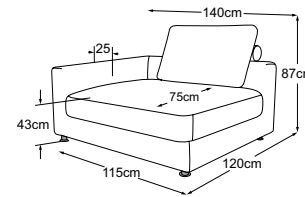


**Element 120 deep armrest left**  
Item number: D071101

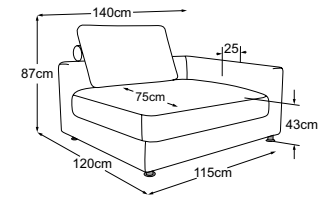


**Element 120 deep armrest right**  
Item number: D071102

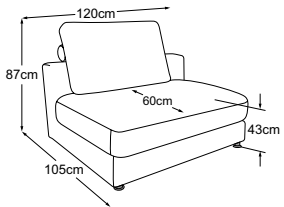


**Element 120**  
Item number: D071120

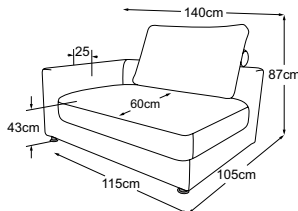


**Element 120 armrest left**  
Item number: D071121

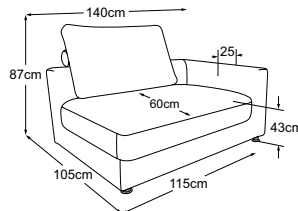


**Element 120 armrest right**  
Item number: D071122

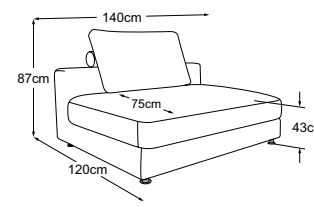


**Element 140 deep**  
Item number: D071123

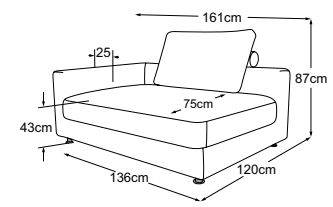


**Element 140 deep armrest left**  
Item number: D071124

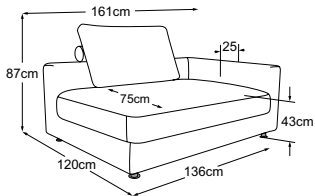


**Element 140 deep armrest right**  
Item number: D071125

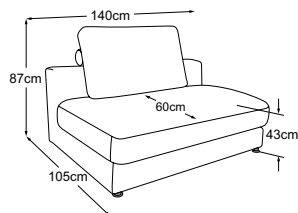


**Element 140**  
Item number: D071119

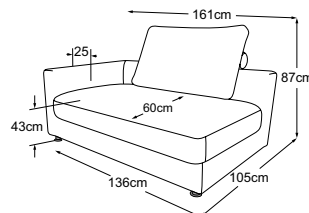

**Element 140 armrest left**  
Item number: D071126

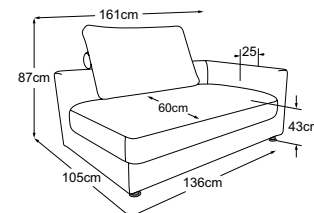

**Element 140 armrest right**  
Item number: D071127

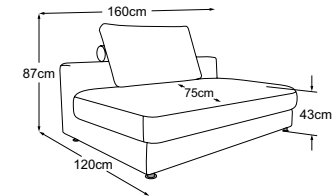

**Element 160 deep**  
Item number: D071128


BERRY

# Type plan




\*Please note that the elements with pipe quilting have a wave spring base instead of a pocket spring core.


Decorative cushions are available in a wealth of designs and upholstery options.  
Find out more at [www.designwerk.li](http://www.designwerk.li)

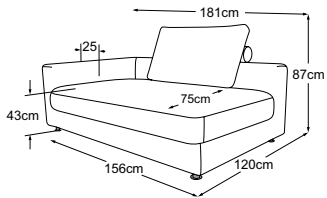


**Element 160 deep armrest left**  
Item number: D071129

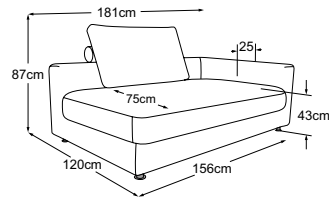


**Element 160 deep armrest right**  
Item number: D071130

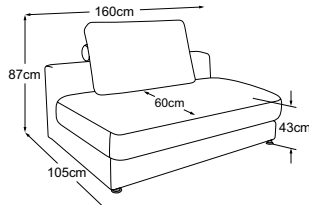


**Element 160**  
Item number: D071118

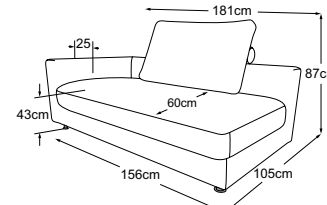


**Element 160 armrest left**  
Item number: D071131

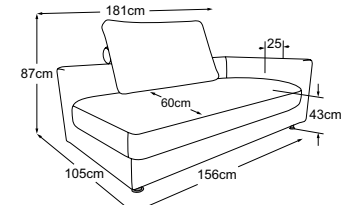


**Element 160 armrest right**  
Item number: D071132

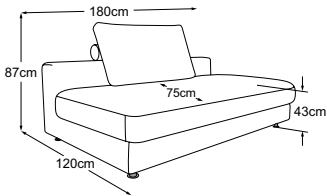


**Element 180 deep**  
Item number: D071133

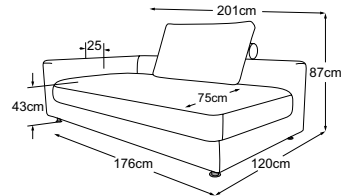


**Element 180 deep armrest left**  
Item number: D071134

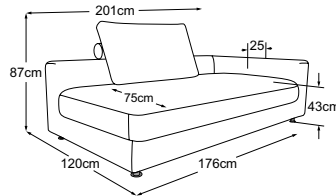


**Element 180 deep armrest right**  
Item number: D071135

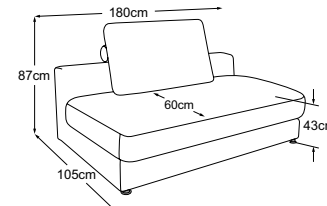


**Element 180**  
Item number: D071117

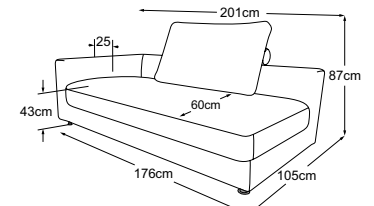


**Element 180 armrest left**  
Item number: D071136

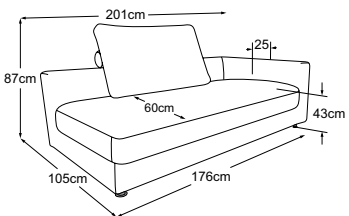


**Element 180 armrest right**  
Item number: D071137

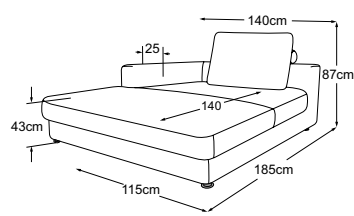


**REC armrest left**  
Item number: D071660

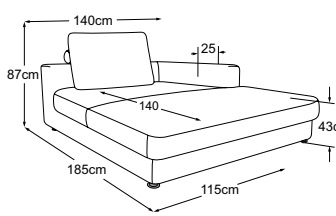

**REC armrest right**  
Item number: D071661

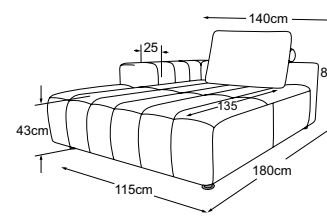

**REC PS armrest left\***  
Item number: D071662\*

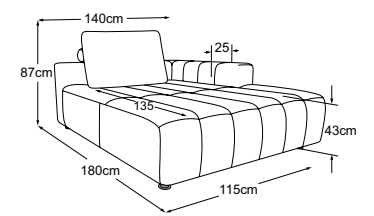

**REC PS armrest right\***  
Item number: D071663\*


BERRY

# Type plan




\*Please note that the elements with pipe quilting have a wave spring base instead of a pocket spring core.


Decorative cushions are available in a wealth of designs and upholstery options. Find out more at [www.designwerk.li](http://www.designwerk.li)

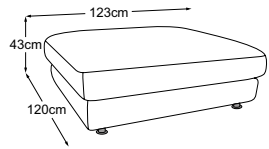


**Stool 120**  
Item number: D071800

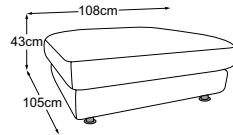


**Stool 105**  
Item number: D071801

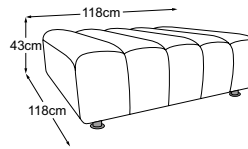


**Stool PS 120\***  
Item number: D071803\*

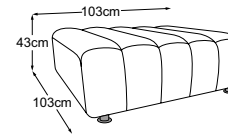


**Stool PS 105\***  
Item number: D071802\*

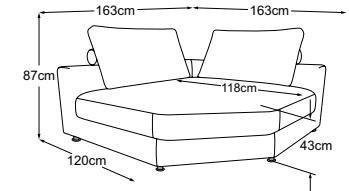


**Trapeze corner 120-105**  
Item number: D071521

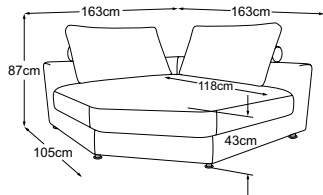


**Trapeze corner 105-120**  
Item number: D071522

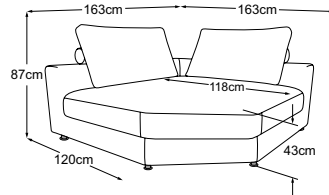


**Trapeze corner 120-120**  
Item number: D071519

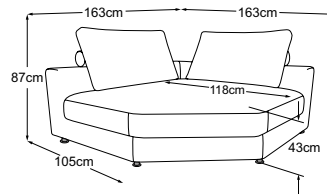


**Trapeze corner 105-105**  
Item number: D071520

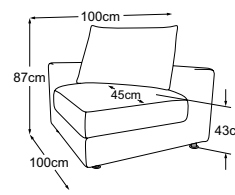


**Corner 100**  
Item number: D071511

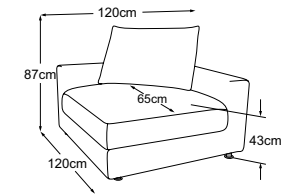

**Corner 120**  
Item number: D071512

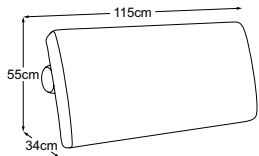

**Cushion with roller**  
Item number: D071980

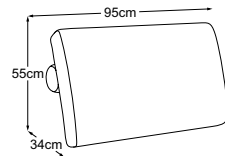

**Cushion with roller**  
Item number: D071985

Foot available in:



**B: satin nickel**  
Please specify foot variant on order.

BERRY

# Connection logic



The following elements can be connected to each other:

	D071100	D071101	D071102	D071104	D071105	D071117	D071118	D071119	D071120	D071121	D071122	D071123	D071124	D071125	D071126	D071127	D071128	D071129	D071130	D071131	D071132	D071133	D071134	D071135	D071136	D071137	D071511	D071512	D071519	D071520	D071521	D071522	D071660	D071661	D071662	D071663
ELT 120 deep w/o AR	D071100	X	X	X		X						X	X	X			X	X	X			X	X	X				X	X		X	X	X	X	X	X
ELT 120 deep AR left	D071101	X		X								X		X			X		X					X			X	X				X		X		X
ELT 120 deep AR right	D071102	X	X			X						X	X				X	X				X	X					X	X		X	X		X		X
ELT 100 w/o AR	D071104				X		X	X	X	X	X				X	X			X	X					X	X	X		X		X	X	X	X	X	X
ELT 100 deep w/o AR	D071105	X	X	X		X						X	X	X			X	X	X			X	X	X				X	X		X		X	X	X	X
ELT 180 w/o armrest	D071117				X		X	X	X	X	X				X					X	X				X	X	X		X		X	X	X	X	X	X
ELT 160 w/o armrest	D071118				X		X	X	X	X	X				X					X	X				X	X	X		X		X	X	X	X	X	X
ELT 140 w/o armrest	D071119				X		X	X	X	X	X				X					X	X				X	X	X		X		X	X	X	X	X	X
ELT 120 w/o armrest	D071120				X		X	X	X	X	X				X					X	X				X	X	X		X		X	X	X	X	X	X
ELT 120 armrest left	D071121				X		X	X	X	X	X									X						X	X		X		X		X		X	
ELT 120 armrest right	D071122				X		X	X	X	X	X				X					X					X		X		X		X		X		X	
ELT 140 deep w/o AR	D071123	X	X	X		X							X	X			X	X	X			X	X	X				X	X		X	X	X	X	X	X
ELT 140 deep AR left	D071124	X		X		X						X		X			X		X			X		X				X	X		X		X		X	
ELT 140 deep AR right	D071125	X	X			X						X	X				X	X				X	X					X	X		X	X		X		X
ELT 140 armrest left	D071126				X		X	X	X	X	X				X					X	X				X	X	X		X		X		X		X	
ELT 140 armrest right	D071127				X		X	X	X	X	X				X					X					X		X		X		X		X		X	
ELT 160 deep w/o AR	D071128	X	X	X		X						X	X	X			X	X	X			X	X	X				X	X		X	X	X	X	X	X
ELT 160 deep AR left	D071129	X		X		X						X		X			X		X			X		X				X	X		X		X		X	
ELT 160 deep AR right	D071130	X	X			X						X	X				X	X				X	X					X	X		X	X		X		X
ELT 160 armrest left	D071131				X		X	X	X	X	X				X					X						X	X		X		X		X		X	
ELT 160 armrest right	D071132				X		X	X	X	X	X				X					X					X	X	X		X		X		X		X	
ELT 180 deep w/o AR	D071133	X	X	X		X						X	X	X			X	X	X			X	X	X				X	X		X	X	X	X	X	X
ELT 180 deep AR left	D071134	X		X		X						X		X			X		X			X		X				X	X		X		X		X	
ELT 180 deep AR right	D071135	X	X			X						X	X				X	X				X	X					X	X		X	X		X		X
ELT 180 armrest left	D071136				X		X	X	X	X	X				X					X						X	X		X		X		X		X	
ELT 180 armrest right	D071137				X		X	X	X	X	X				X					X					X	X	X		X		X		X		X	
Corner 100	D071511				X		X	X	X	X	X				X	X				X	X				X	X	X									
Corner 120	D071512	X	X	X		X						X	X	X			X	X	X			X	X	X				X								
Trapeze corner 120-120	D071519	X	X	X		X						X	X	X			X	X	X			X	X	X				X		X	X		X		X	
Trapeze corner 105-105	D071520				X		X	X	X	X	X				X	X				X	X				X	X	X		X		X		X		X	
Trapeze corner 120-105	D071521	X	X			X	X	X	X	X	X				X	X				X	X				X	X	X		X		X		X		X	
Trapeze corner 105-120	D071522	X		X	X		X	X	X	X	X				X	X				X	X				X	X	X		X		X		X		X	
REC armrest left	D071660	X		X	X	X	X	X	X	X	X			X	X	X	X	X	X			X	X	X										X		X
REC armrest right	D071661	X	X		X	X	X	X	X	X	X			X	X	X	X	X	X			X	X	X									X		X	
REC PS armrest left	D071662	X		X	X	X	X	X	X	X	X			X	X	X	X	X	X			X	X	X										X		X
REC PS armrest right	D071663	X	X		X	X	X	X	X	X	X			X	X	X	X	X	X			X	X	X									X		X	

The individual elements can be quickly and easily connected using the easyjack connector system. Scan the QR code for more information:



BERRY

# Impressions





[www.designwerk.li](http://www.designwerk.li)